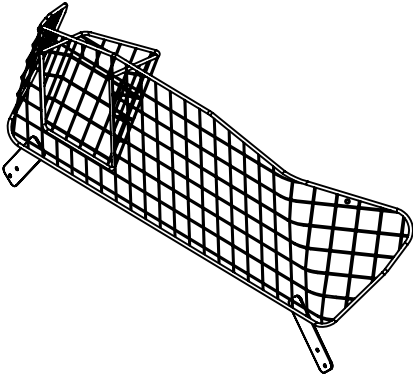

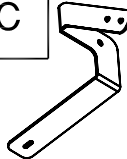

 
 






 

 
 
 
 


## INSTALLATION INSTRUCTIONS

DESCRIPTION: COMPARTMENT SEPARATOR

|  |  |  |  |   |  |   |  |  |
|--|--|--|--|---|--|---|--|--|
| A  |     |  |  |   | B  | C   | D  | E  |
|  |  |  |  |   |  X1 |  X1 |  X1 |  X1 |
| J  | K  | L  | M  | N   | F  | G   | H  | I  |
|  |  |  |  |   |  X2 |  X2 |  X2 |  X6 |
|  X2 |  X2 |  X2 |  X2 |  X2 |  |   |  |  |

### TOOLS REQUIRED



### Meaning of Characters:



T :Tightening Torque

