





Pairing and Connecting

Bluetooth Audio Transmitter not connected to iPod

- 1. Switch on Ignition.
- 2. Plug the *Bluetooth* Audio Transmitter into the iPod to begin the pairing and connecting process.
- While searching, the light on the Bluetooth Audio Transmitter will flash quickly. Once connected, the light will flash twice per second.

Bluetooth Audio Transmitter connected to iPod

- 1. Switch on Ignition.
- 2. Turn the iPod on by pressing any button on the iPod.
- Press play button once to begin the pairing and connecting process.
- While searching, the light on the Bluetooth Audio Transmitter will flash quickly. Once connected, light will flash twice per second.

Streaming Audio to Radio

- 1. Once the Bluetooth Audio Transmitter has connected, music will begin to stream automatically.
- 2. Change radio to AUX mode.

Note:

Connecting any other media device to the vehicle AUX IN jack will deactivate the Bluetooth Audio Transmitter audio streaming.

Features

Previous Track → short press '-' button on BT microphone

Next Track → short press '+' button on BT microphone

Pause iPod → long press '-' button pressed on BT microphone

Play iPod → long press '+' button pressed on BT microphone

Light Status

Pairing and Connecting - Quick Flash

Connected - Flash twice per second

Stand by / Not Connected - Flash once every two seconds

Note

If you are connecting a mobile phone and the *Bluetooth* Audio Transmitter to the *Bluetooth* kit, it is highly recommended that you connect the phone first.

Troubleshooting

No iPod audio can be heard

Problem

Cannot pair or connect the *Bluetooth* Audio Transmitter to the *Bluetooth* Kit

Cause and Solution

- 1. Ignition is turned off. Turn on ignition.
- 2. Bluetooth Audio Transmitter pairing time expired. Reset the Bluetooth Audio Transmitter by disconnecting it from the iPod and then repeat pairing procedure.
- 3. Another A2DP device is already connected to the *Bluetooth* kit. Press and hold the '-' button on the switch microphone until a tone is heard. Redo pairing procedure.
- iPod battery low. Connect the charging cable. Redo pairing procedure.
- 1. Ignition is turned off. Turn on ignition.
- 2. Volume is on mute or set too low. Adjust volume from vehicle's audio system.
- iPod battery low. Connect the charging cable. Redo pairing procedure.
- 4. The *Bluetooth* Audio Transmitter is not connected to the *Bluetooth* kit, re-connect the *Bluetooth* Audio Transmitter.
- 5. Radio is not set to Auxiliary input. Set radio to Auxiliary input.
- 6. iPod is paused. Press play button.

volume from the vehicle's audio system.

- Another media device is connected to the vehicle AUX IN jack. Remove any plug from vehicle AUX IN jack.
- Bluetooth phone is connected and active/in call. iPod functionality is not present when phone is active/in call.
- 2. Bluetooth remote control profile is connected to phone instead of the Bluetooth Audio Transmitter. Press and hold the '-' button on the switch microphone until a tone is heard. Redo paring procedure.

Volume from the Bluetooth Audio Transmitter is fixed. Adjust the

Cannot adjust volume from the iPod

No iPod functionality through the Bluetooth Kit

Note:

Do not leave the iPod in the vehicle for prolonged periods of time as heat and humidity may damage it.

iPod is a trademark of Apple Inc., registered in the US and other countries.







Mazda Factory Fitted Bluetooth® Kit

Pairing and Connecting

To pair and connect the *Bluetooth* Audio Transmitter, please follow pairing and connecting procedure in the Mazda *Bluetooth* Owner's Manual.

Streaming Audio to Radio

Select previously connected Bluetooth Audio Transmitter as music source, see the Mazda Bluetooth Owner's Manual for instructions.

- Change radio to Aux mode
- Press play on radio or iPod

Features

Previous Track → press '▼' button on vehicle's audio system or steering wheel

Next Track → press '▲' button on vehicle's audio system or steering wheel

Pause iPod → press 'II' button on vehicle's audio system
Play iPod → press '▶' button on vehicle's audio system

Light Status

Pairing and Connecting - Quick Flash

Connected - Flash twice per second

Stand by / Not Connected - Flash once every two seconds

Note:

If you are connecting a mobile phone and the *Bluetooth* Audio Transmitter to the *Bluetooth* kit, it is highly recommended that you connect the phone first.

Troubleshooting

		1-1	1	
א	ro	n	lem	۱

Cannot pair or connect the *Bluetooth* Audio Transmitter to the *Bluetooth* Kit

No iPod audio can be heard

No iPod functionality through the vehicle audio system

Cannot adjust volume from the iPod

Cause and Solution

- 1. Ignition is turned off. Turn on ignition.
- Refer to Mazda Bluetooth Owner's Manual for pairing and connecting.
- 3. iPod battery low. Connect the charging cable. Redo pairing procedure.
- 1. Ignition is turned off. Turn on ignition.
- 2. Volume is on mute or set too low. Adjust volume from vehicle's audio system.
- iPod battery low. Connect the charging cable. Redo pairing procedure.
- 4. Bluetooth Audio Transmitter is not connected to Bluetooth kit. To connect the Bluetooth Audio Transmitter refer to the Mazda Bluetooth Owner's Manual.
- 5. Radio is not set to Auxiliary input. Set radio to Auxiliary input.
- 6. iPod is paused. Press play button.
- Bluetooth Audio Transmitter is not connected as music source. Refer to the Mazda Bluetooth Owner's Manual for further information.
- Volume from the Bluetooth Audio Transmitter is fixed. Adjust the volume from the vehicle's audio system.

Note:

Do not leave the iPod in the vehicle for prolonged periods of time as heat and humidity may damage it.

iPod is a trademark of Apple Inc., registered in the US and other countries.



