Instruction No	Version	Part. No.
31266960	1.10	31266957, 31266958, 31328248, 31339818, 31339819, 31339820, 31339821, 31339273, 31339274, 31339275, 31339276, 31359241, 31359242, 31359243, 31359244, 31359307, 31359308, 31359309, 31359316, 31359317, 31359318, 31359319, 31359320, 31338997, 31359402, 31359403, 31359404, 31359405, 31373227, 31373229, 31373230, 31373228, 31399156, 31399157, 31399158, 31399159, 31399160


Navigation system, RTI

© Volvo Car Corporation

Equipment




IMG-242205

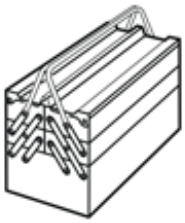


A0000162



IMG-239667

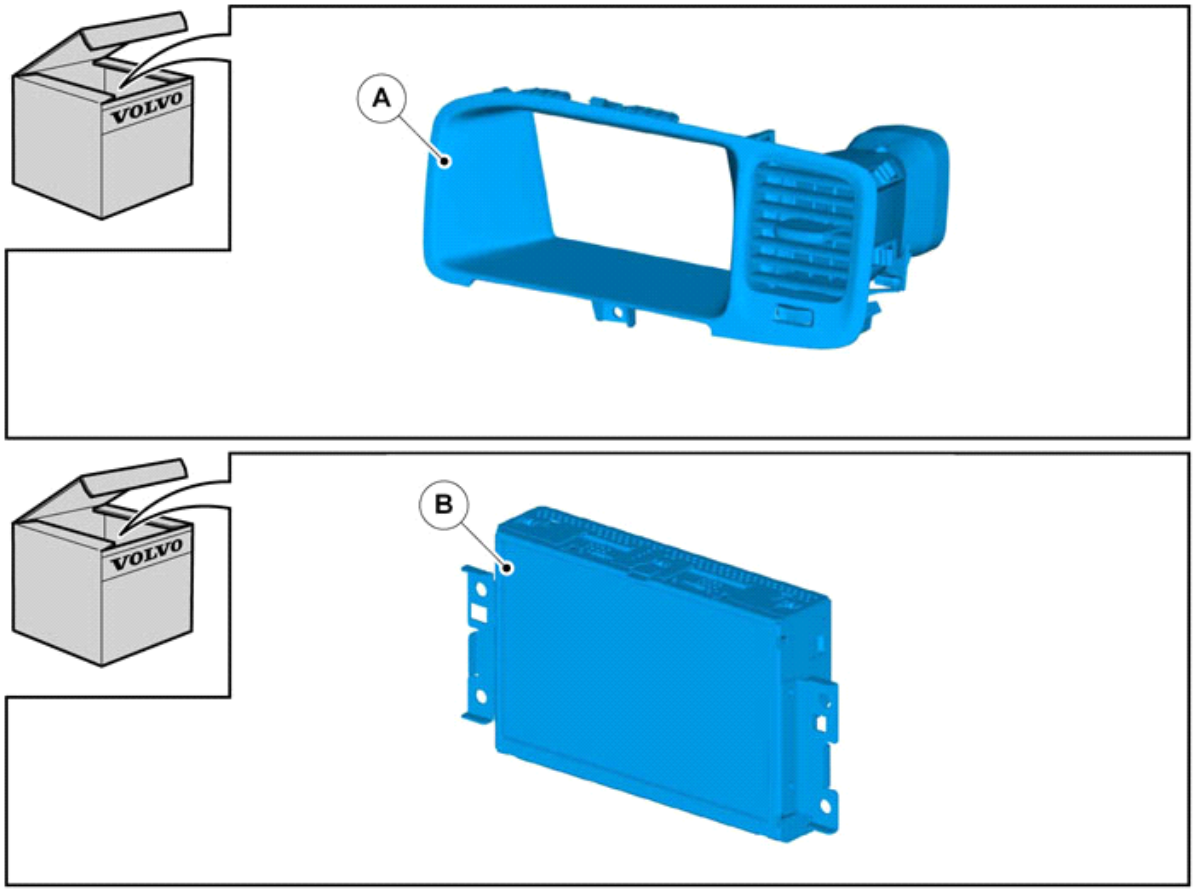

IMG-345546

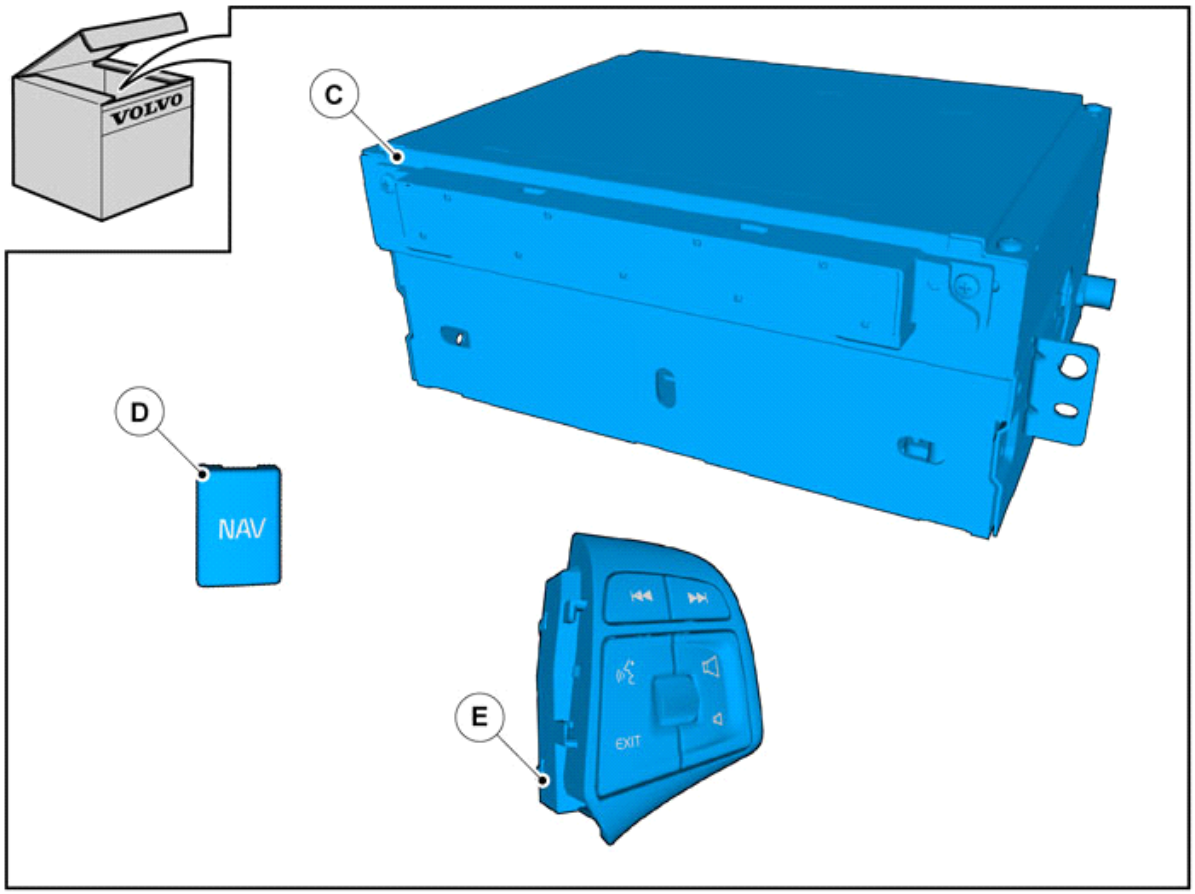

IMG-345547

INTRODUCTION

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

1

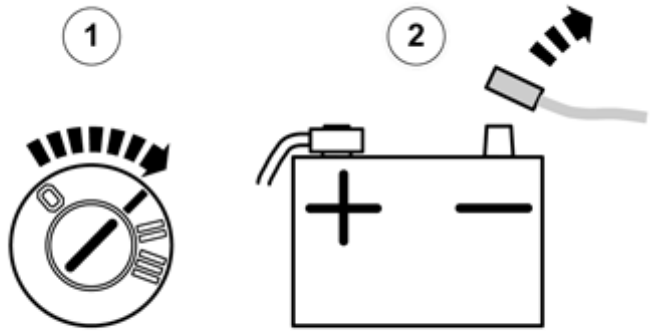

IMG-332180

Set the ignition switch to position I.

Disconnect the battery negative lead.


Note!

Wait at least three minutes before unplugging the connectors or removing other electrical equipment.

Note!


The SRS system remains active for a brief period after power is disconnected. Thus, wait three minutes before starting work.

2

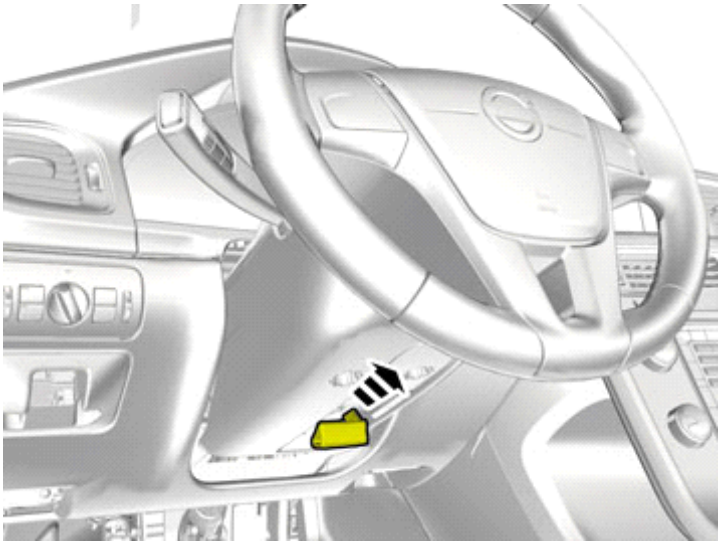


IMG-345551

3

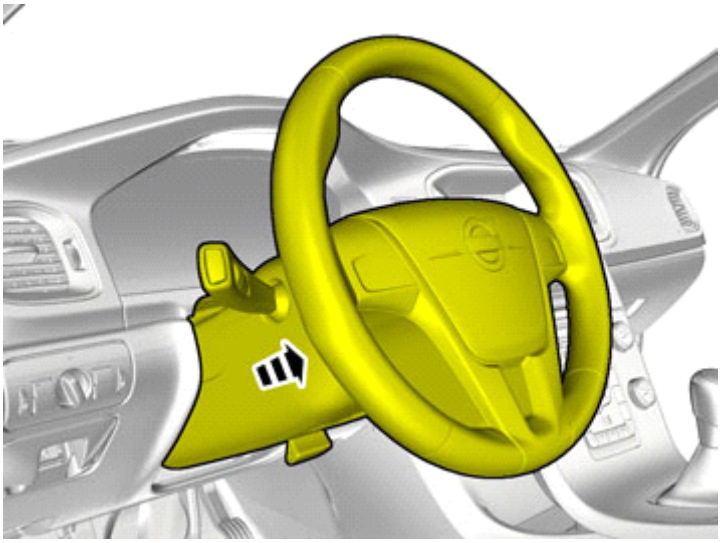

IMG-345553


4

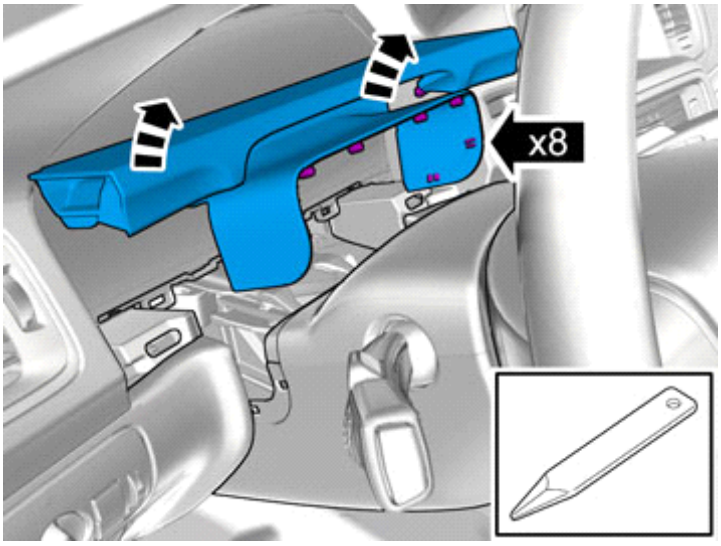

IMG-344722

Remove the panel.


5

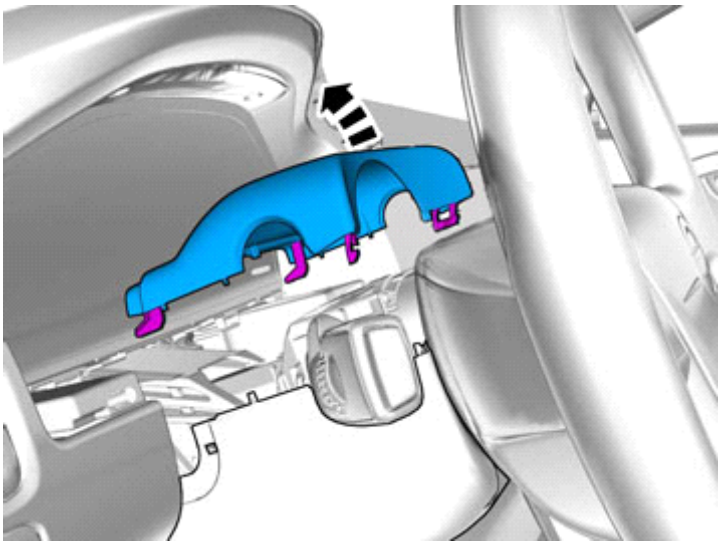

IMG-345554

Remove the panel.


6

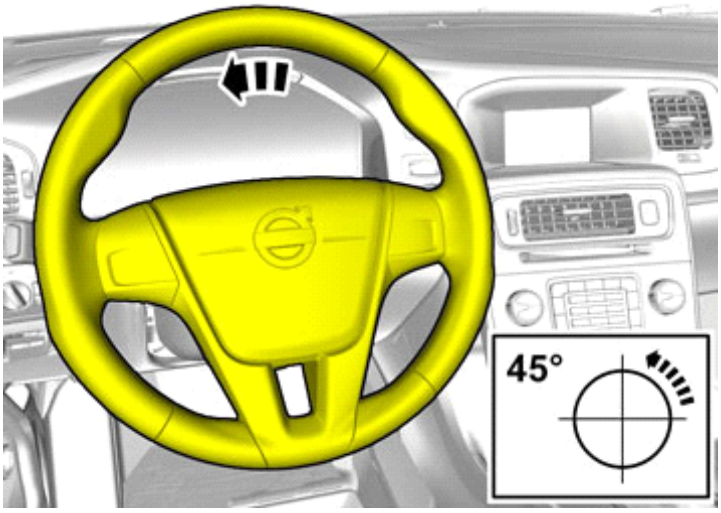

IMG-345555

7

mm

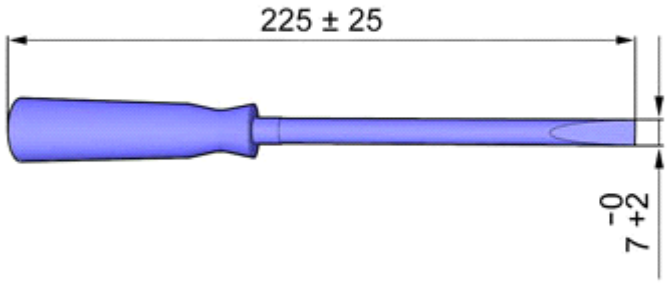


IMG-337683

Removal


Use a flathead screwdriver.

8

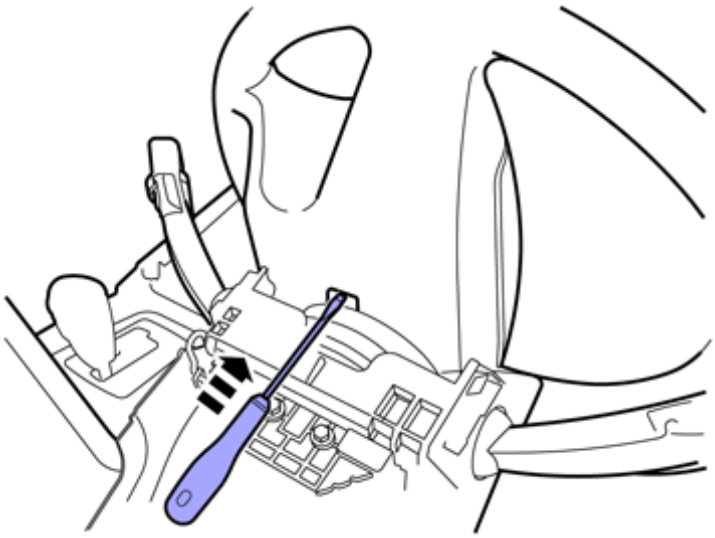


IMG-344725

9

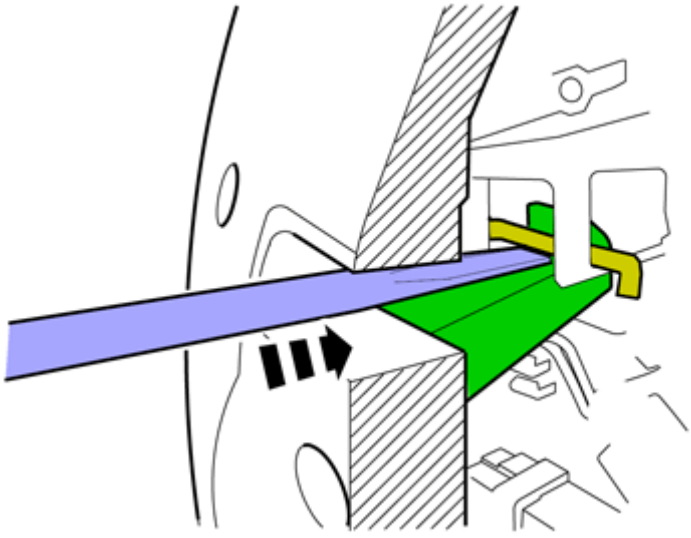

IMG-344726


10

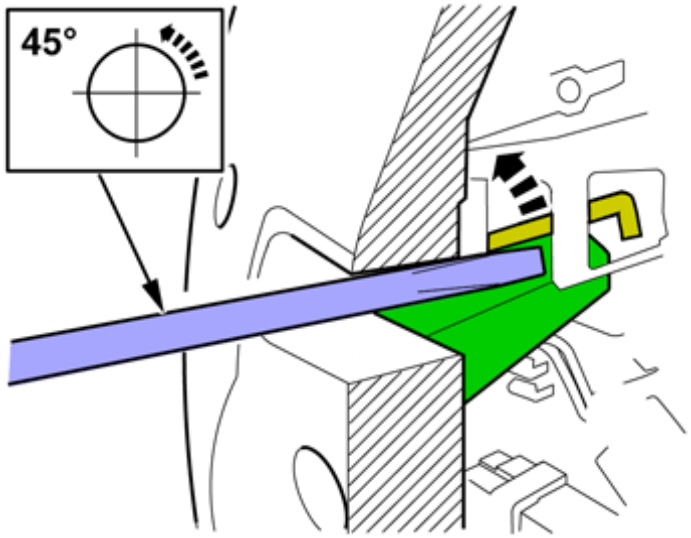

IMG-344727


Release the catch.

11

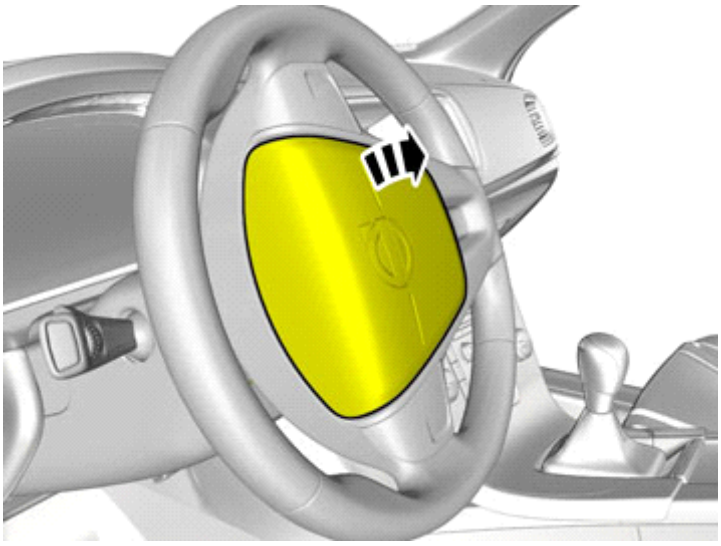

IMG-345556

12

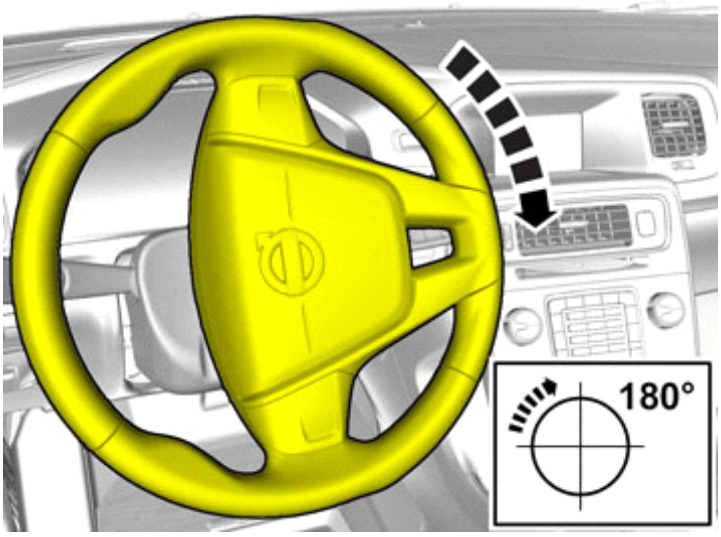

IMG-345557

© Volvo Car Corporation

13




IMG-345558

Repeat the method steps for removal on the opposite side

Turn the steering wheel to neutral position.

14

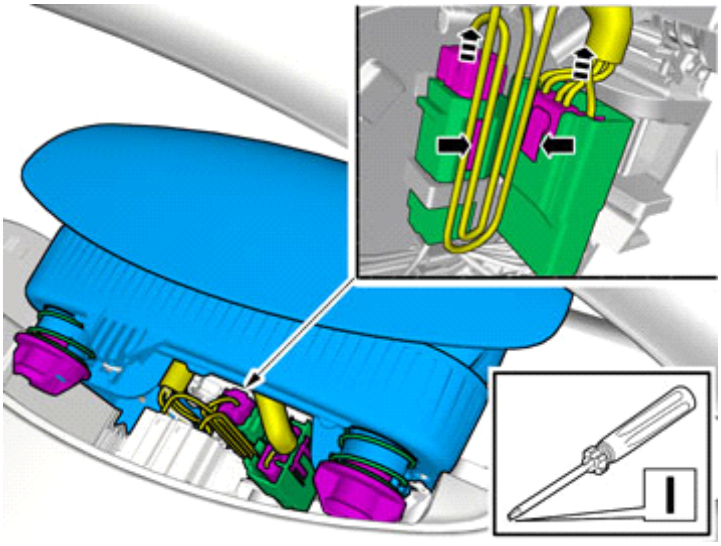


IMG-344730

Release the connector catches.

Unplug the connectors.

© Volvo Car Corporation

15

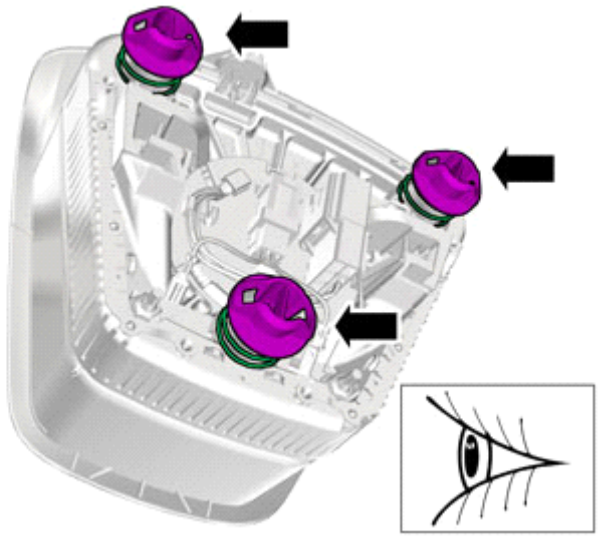


IMG-344731

Check that the holes are in place.

Place the airbag module with the front side facing up on a safe storage area during work.


16

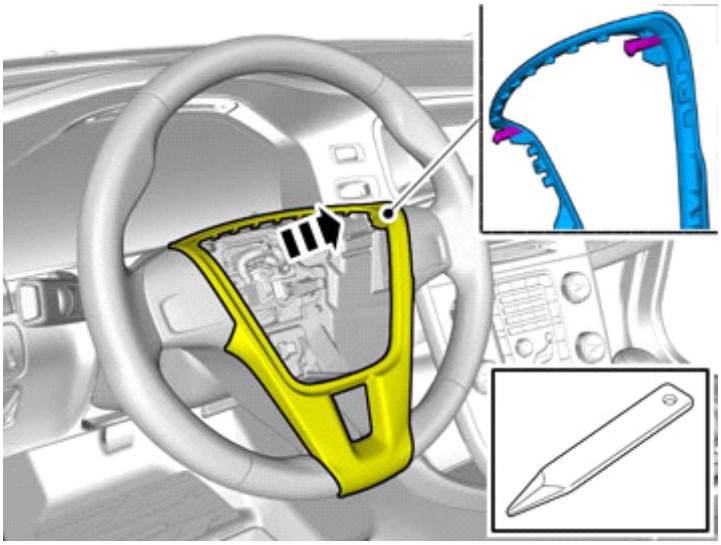

IMG-345559

A large amount of force is required for this procedure.

17

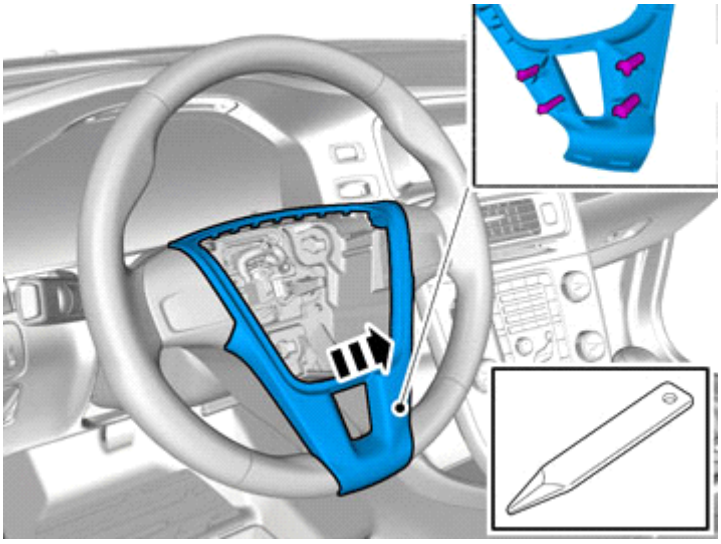


IMG-345560

A large amount of force is required for this procedure.

© Volvo Car Corporation


18

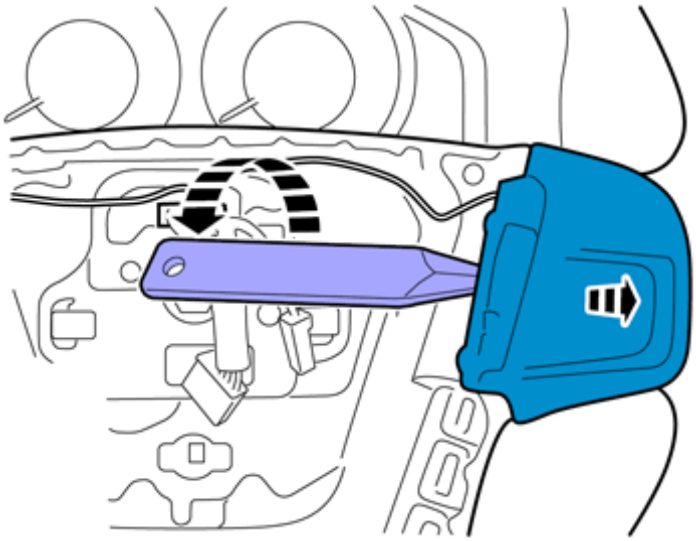

IMG-345561

A large amount of force is required for this procedure.


19

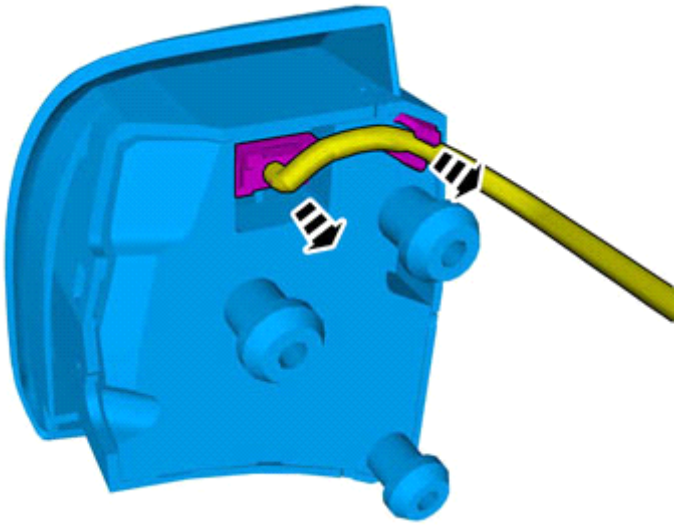

IMG-345562

Unplug the connector.

20

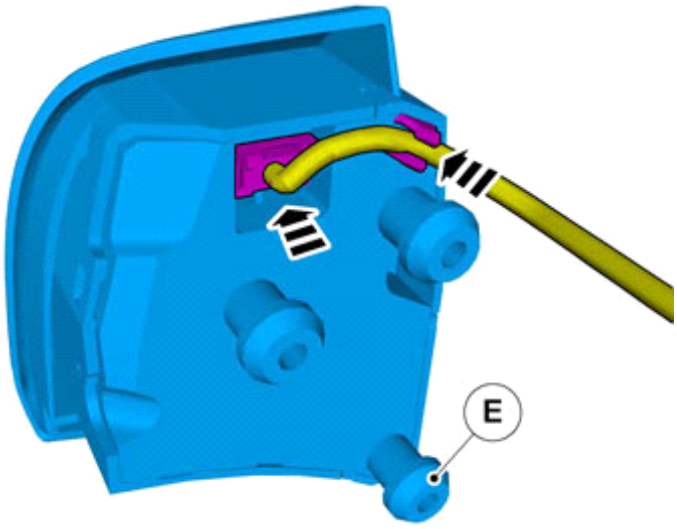


IMG-345563

Plug in the connector.


© Volvo Car Corporation

21

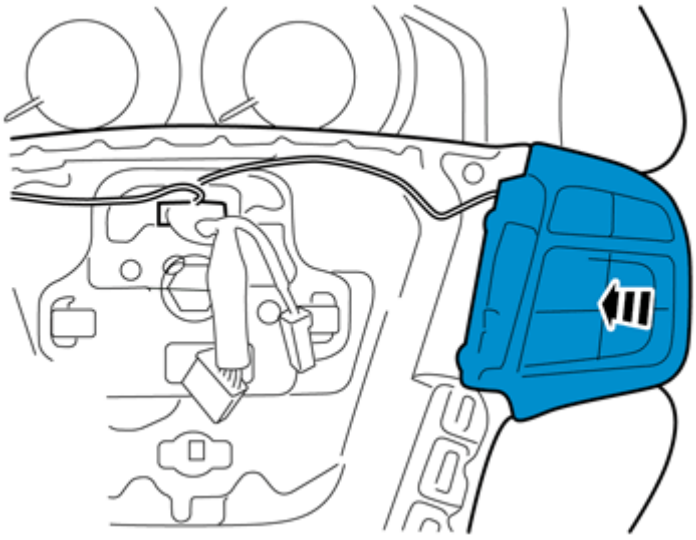


IMG-345564

22

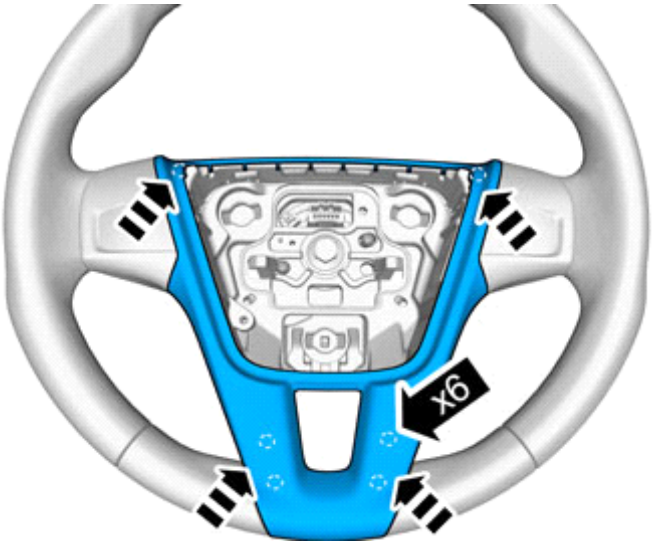

IMG-339675


23

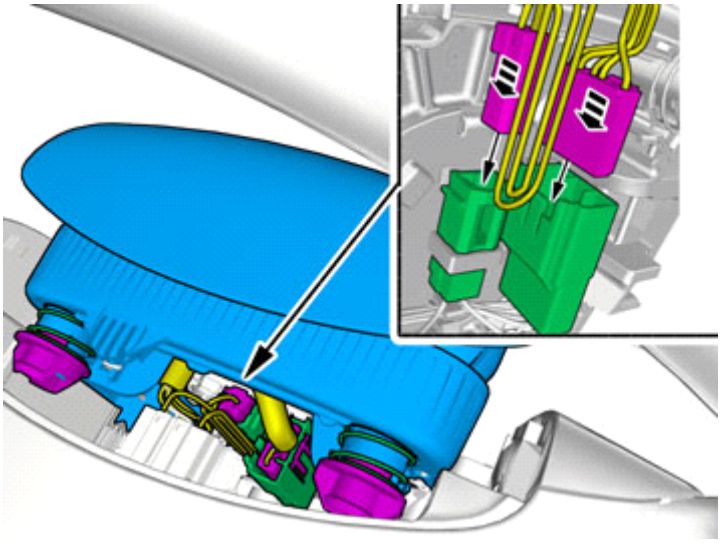

IMG-344748


Plug in the connectors.

24

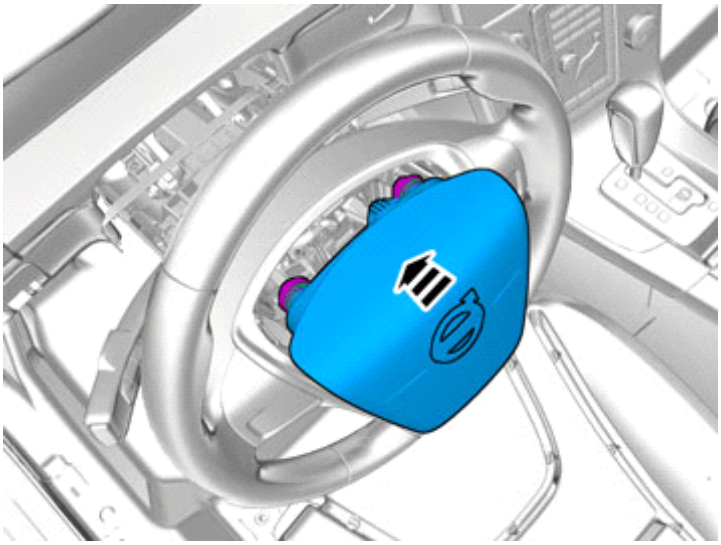

IMG-344749


25

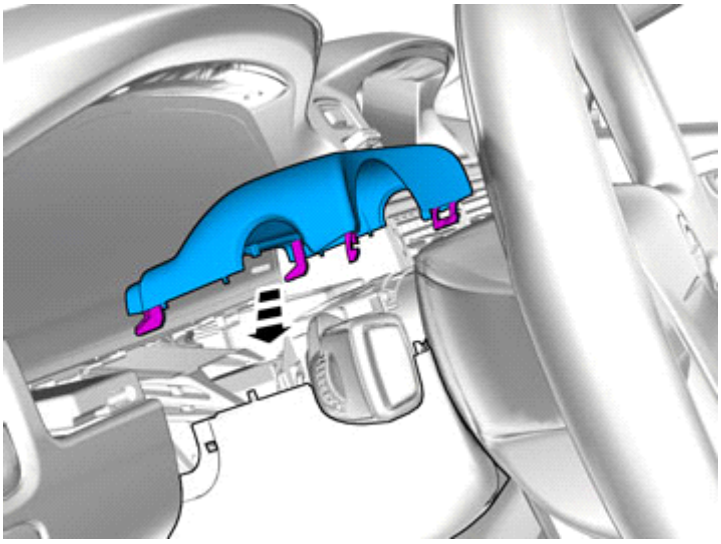

IMG-344758


© Volvo Car Corporation

26

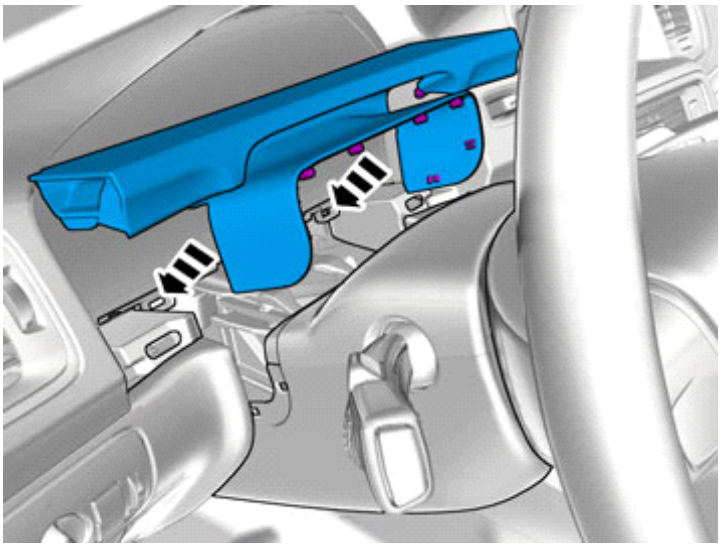

IMG-344751


27

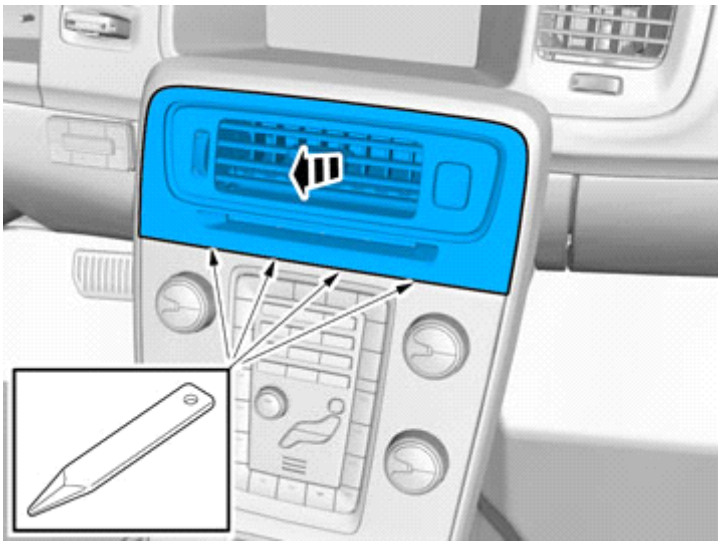

IMG-345113

Remove the panel.

28

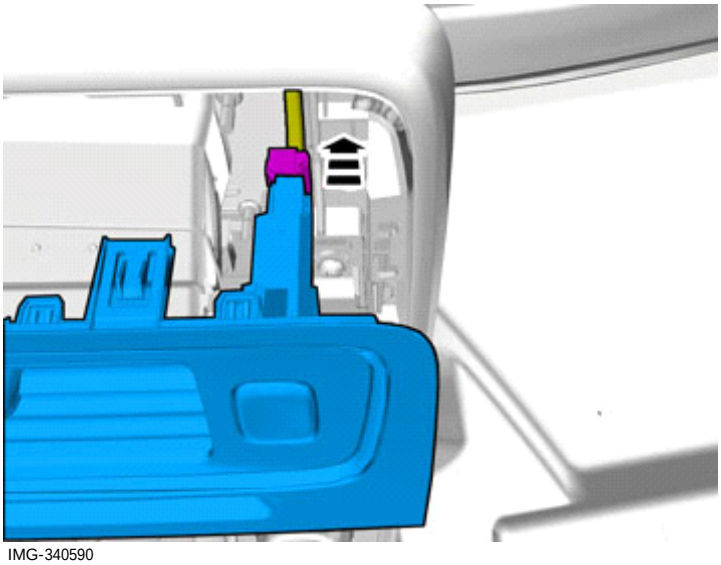


IMG-340590

Unplug the connector.

© Volvo Car Corporation


29

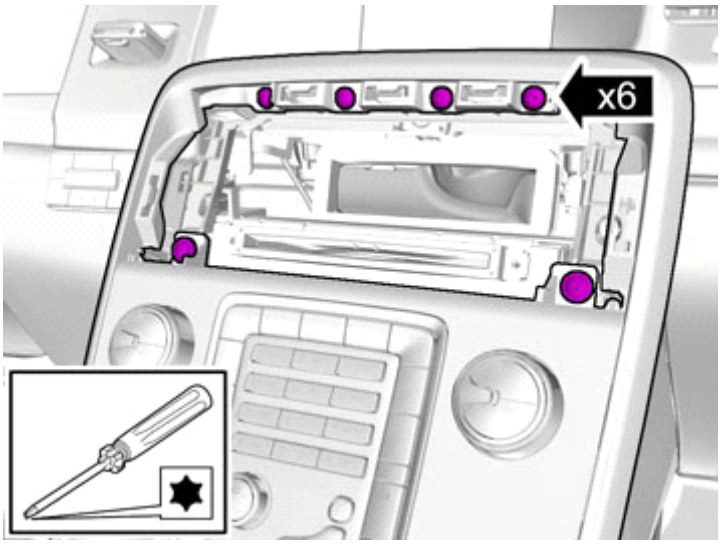

IMG-340589

Remove the screws.

30

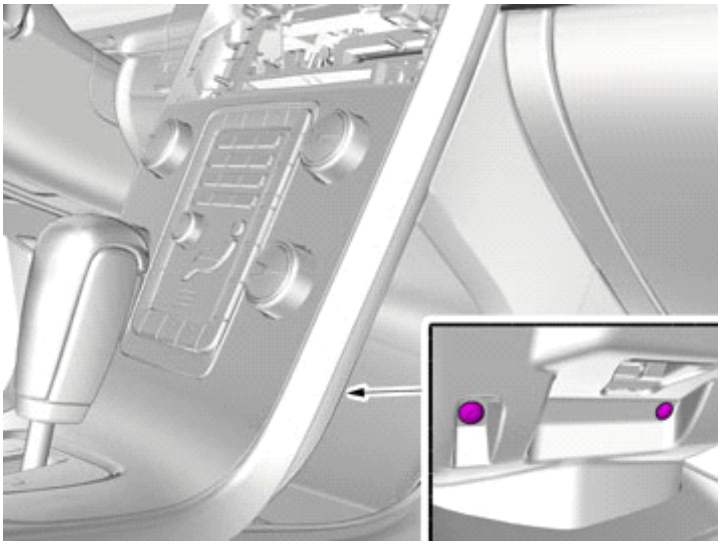


IMG-340591

Remove the screws.

© Volvo Car Corporation


31

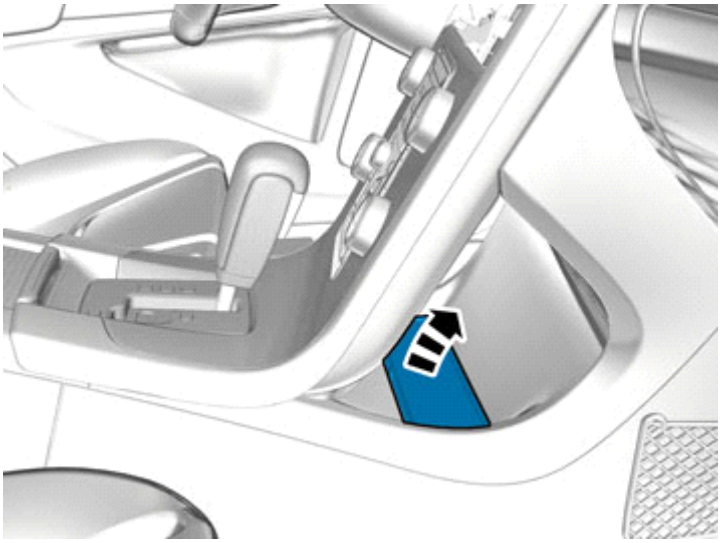

IMG-340596


Applies to cars with automatic transmission

32

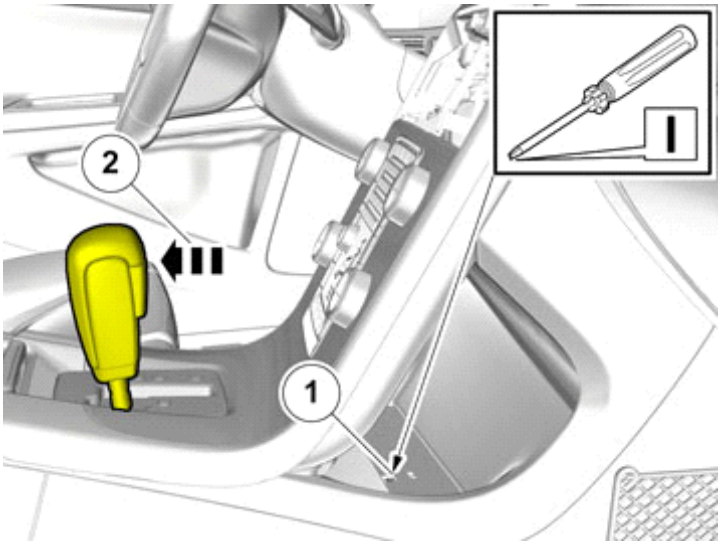

IMG-340597

33

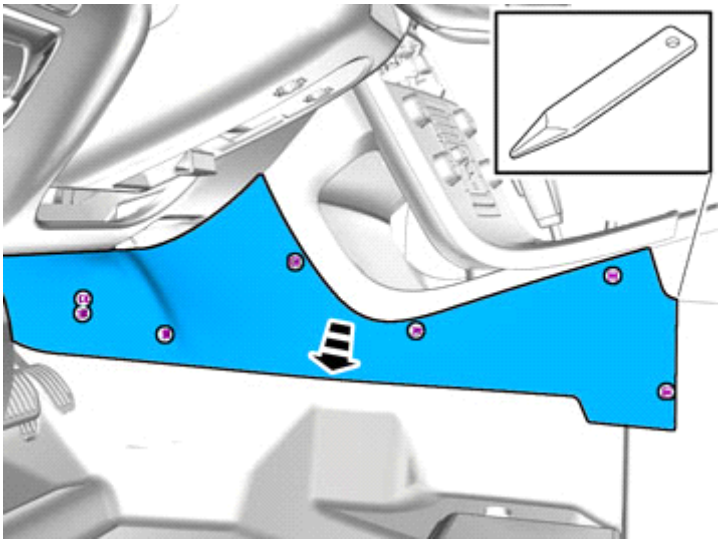


IMG-340598

Applies to all vehicles

Remove the panel.

34

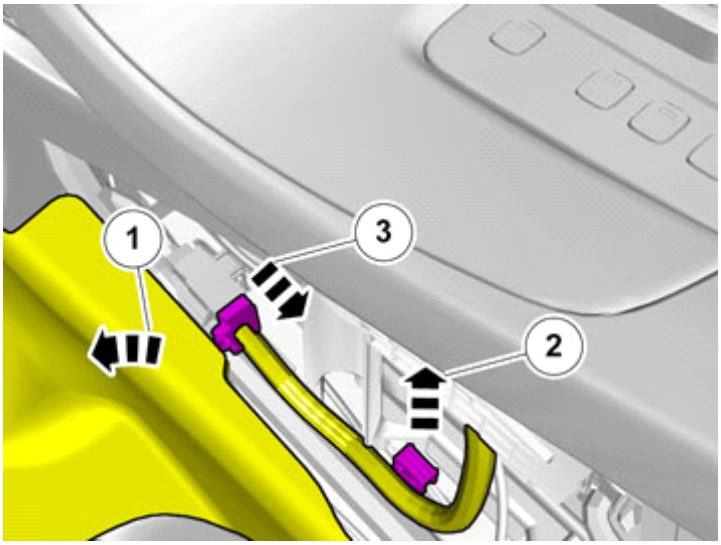


IMG-340599

Fold the carpet to one side.

Unhook the clip(s).

Unplug the connector.

35

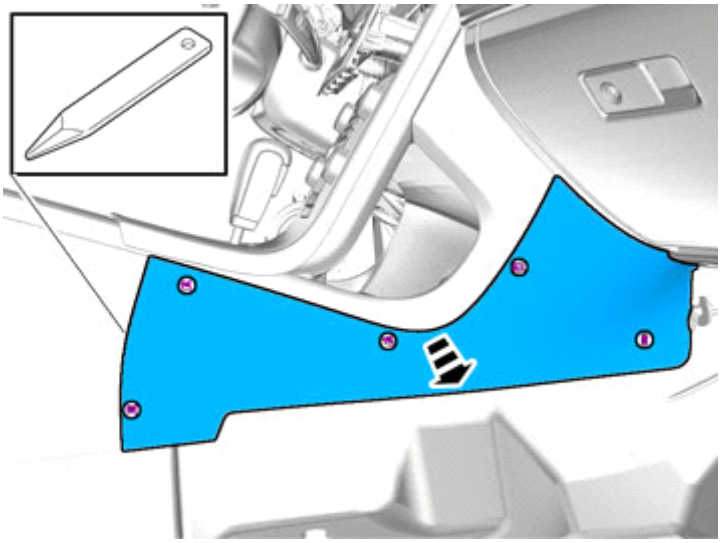


IMG-340600

Applies to vehicles with dynamic suspension

Remove the panel.


36

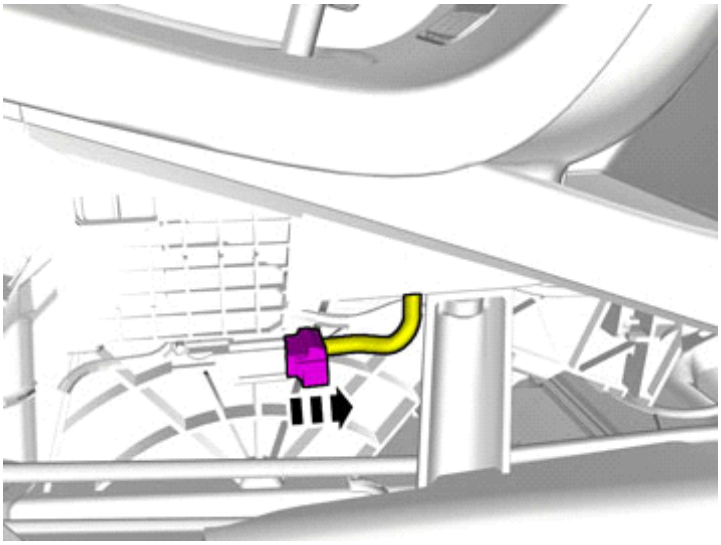

IMG-340601

Unplug the connector.

37

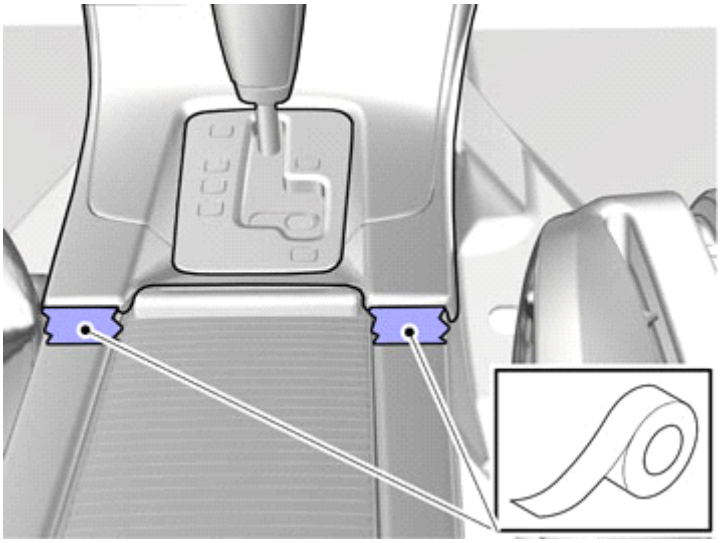


IMG-340602

Applies to all vehicles


Use suitable tape to protect the components.

38

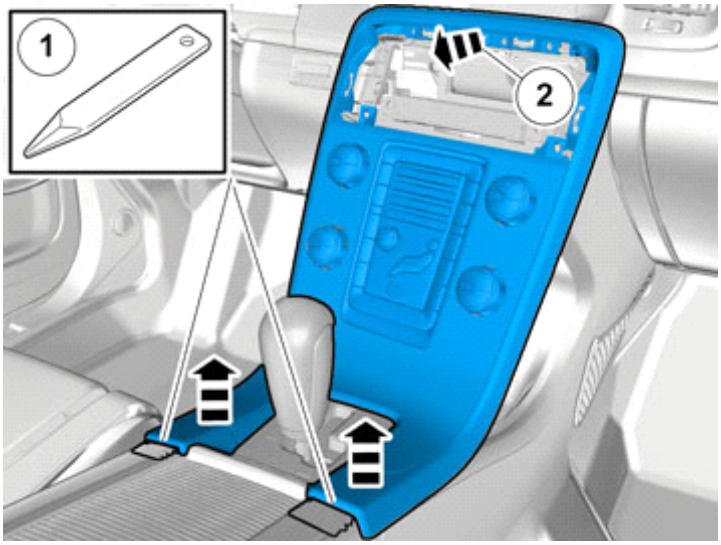

IMG-340603

39

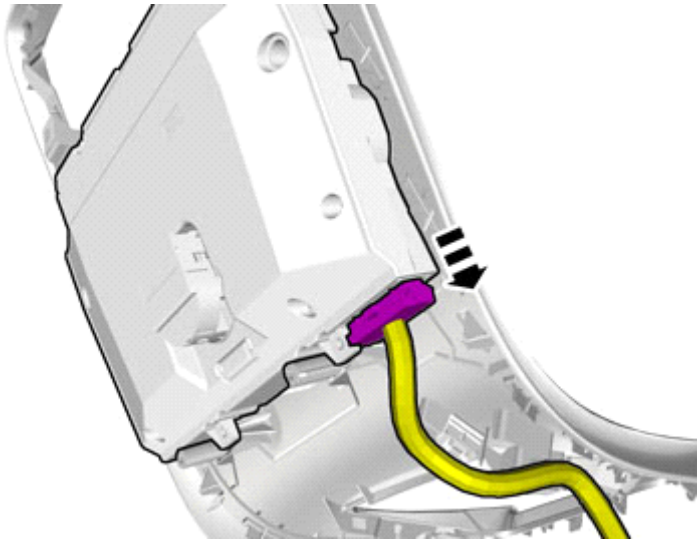

IMG-340604

Unplug the connector.


40



IMG-340605


Remove the screws.

41

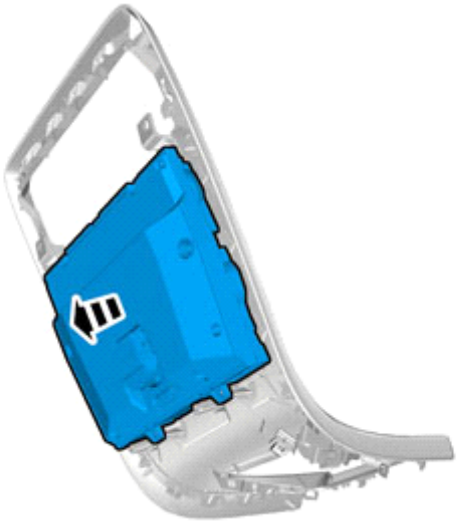


IMG-340607

42

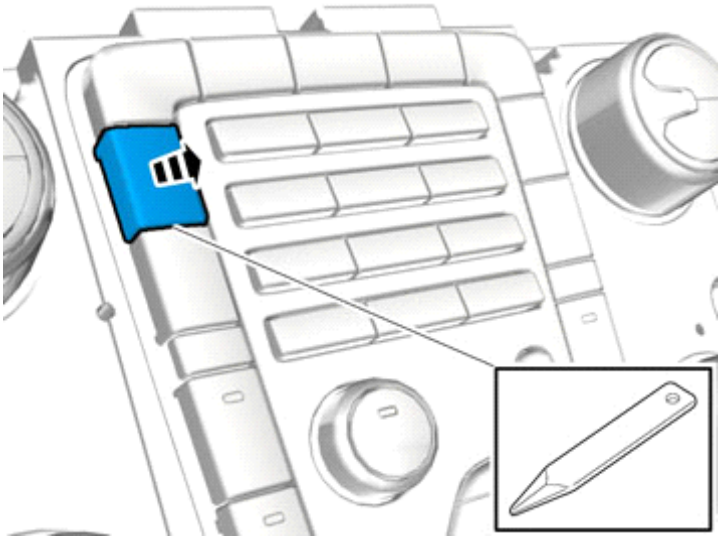


IMG-341736

43

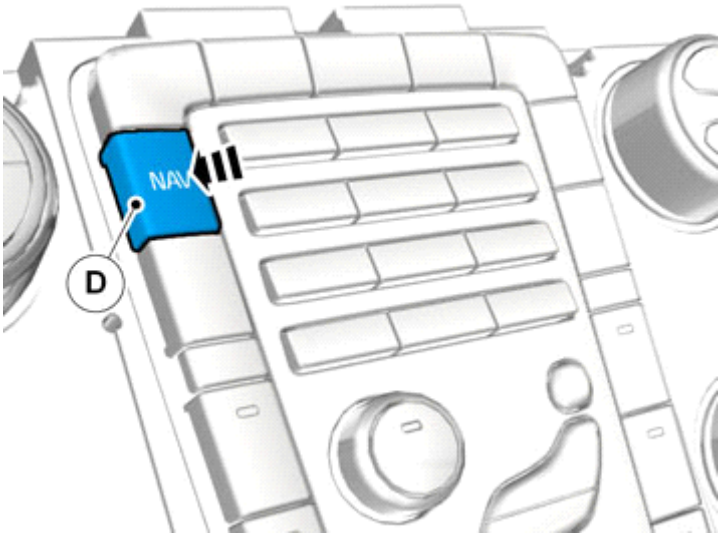

IMG-341737

44

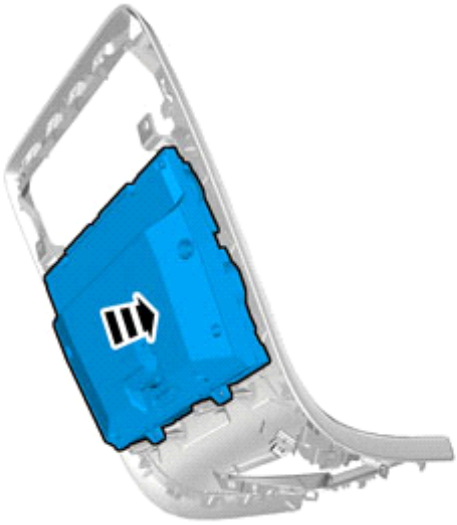

IMG-341739

© Volvo Car Corporation


45



IMG-340605

Reinstall the screws.


46

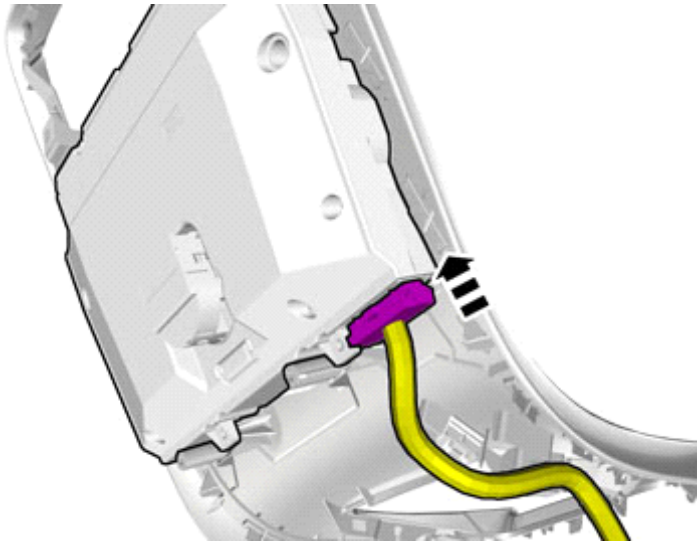

IMG-340622

Plug in the connector.

47

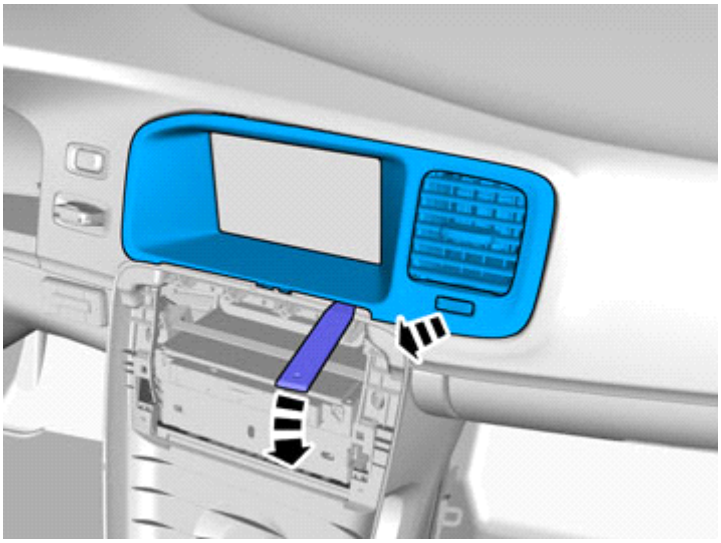


IMG-345114

For all cars with 5" display


Carefully pry off the panel at the lower edge and then all the way around.

48

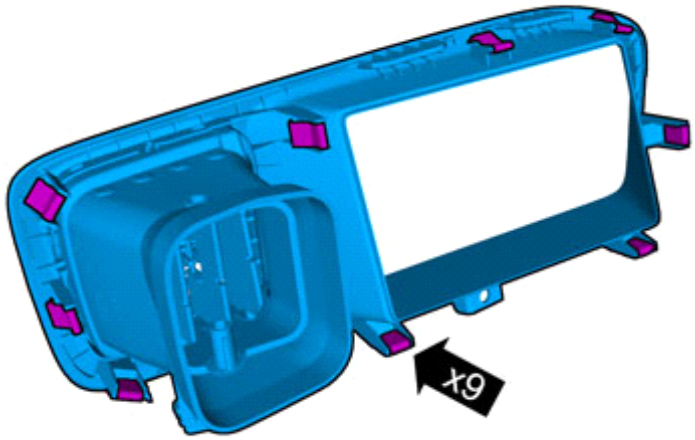

IMG-360002

49

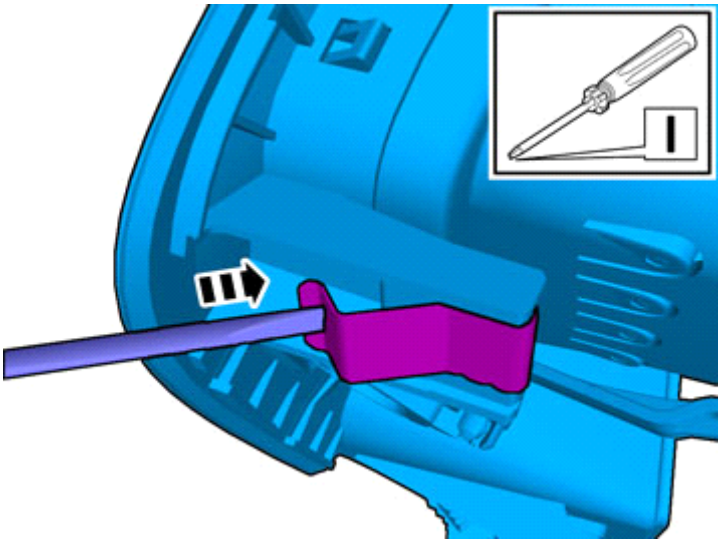

IMG-360001

Use: Electrician's screwdriver


50



IMG-345115

The panel must not be reused.

51

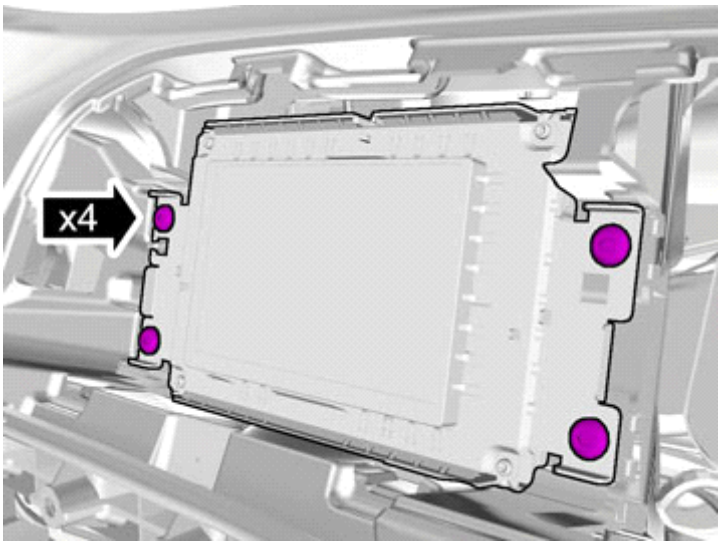


IMG-341794

Slacken off the screws.

The screws will be reused.

52

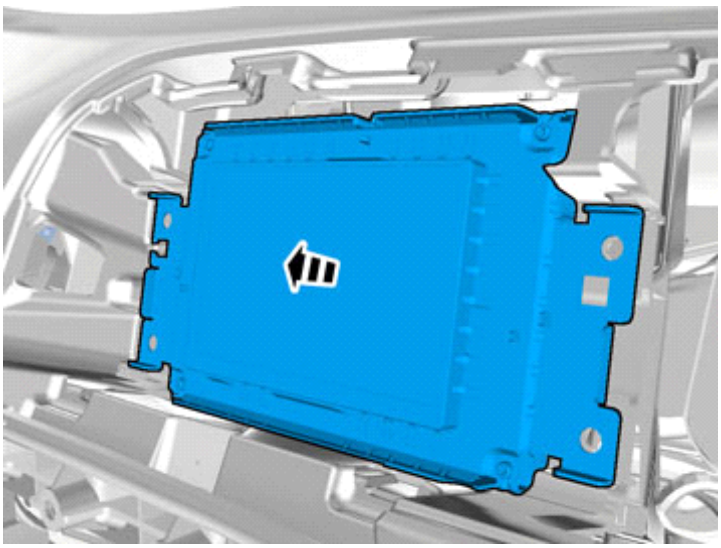


IMG-341795

The component(s) must not be reused.

© Volvo Car Corporation

53

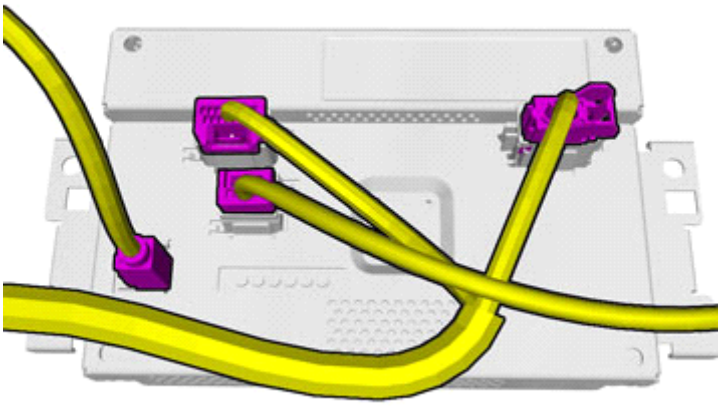


IMG-341796

Unplug the connectors.

The appearance of the parts can vary depending on market.

54

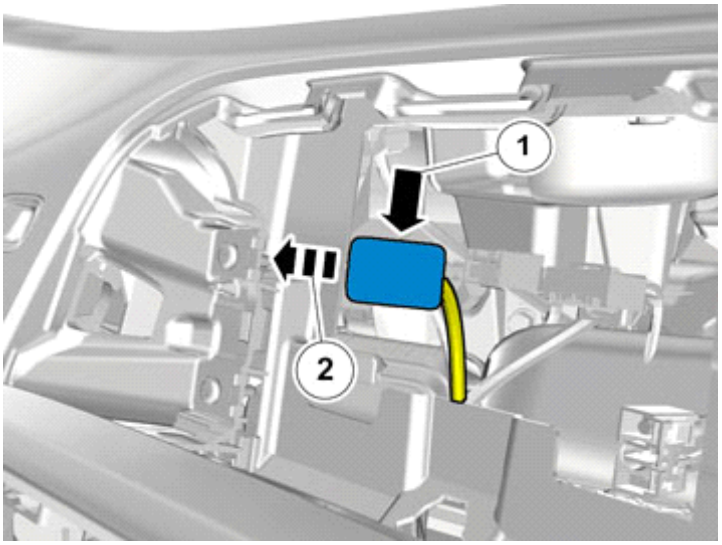


IMG-341797

Locate the prerouted connector.

Remove the foam bag.

© Volvo Car Corporation

55

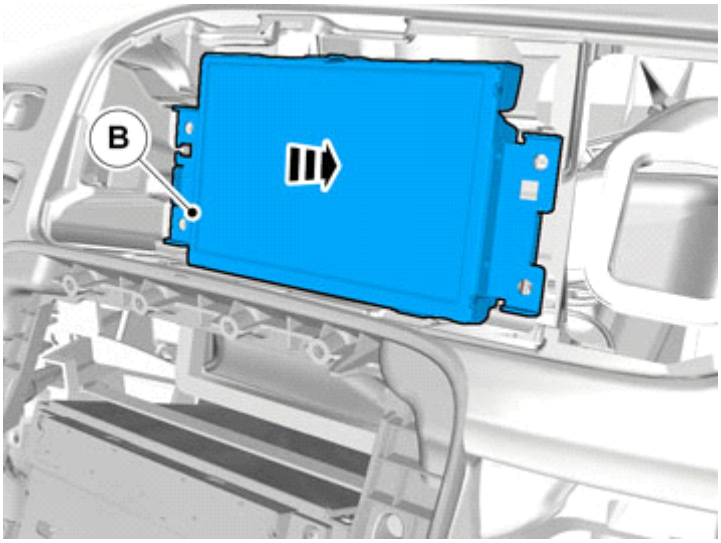


IMG-341798

Plug in the connectors.

The number of conectors can vary depending on the vehicle's equipment level.


56

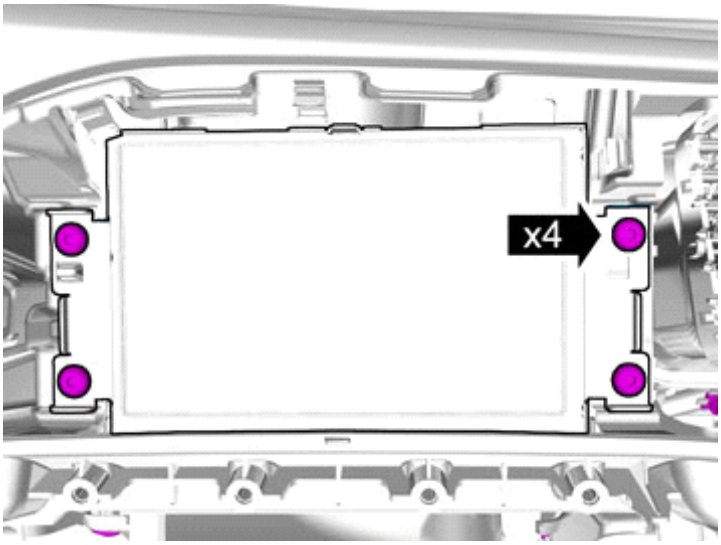

IMG-341801

Reinstall the screws.


57

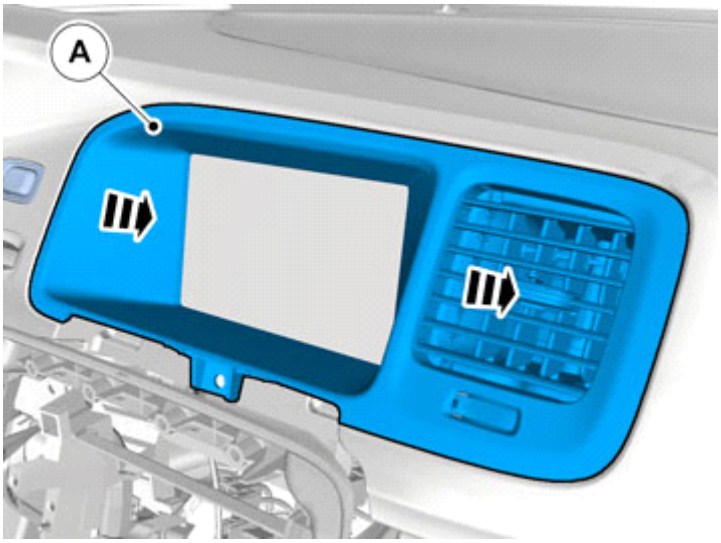

IMG-341803

© Volvo Car Corporation

58

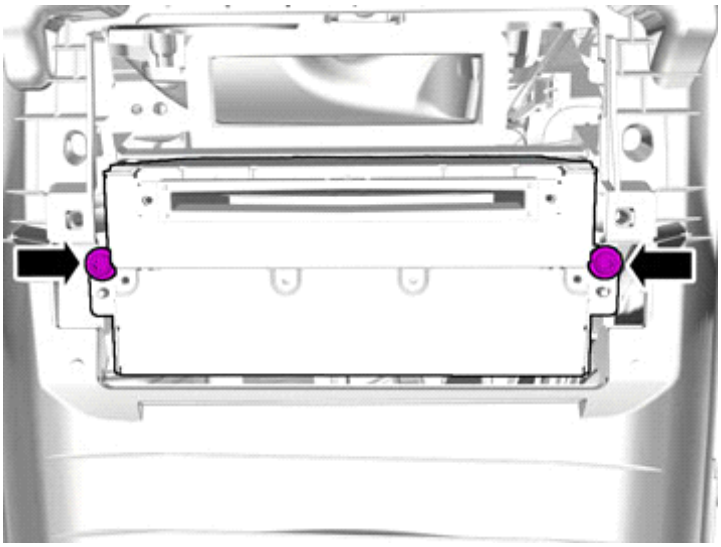


IMG-341807

Applies to all vehicles

Remove the screws.

59

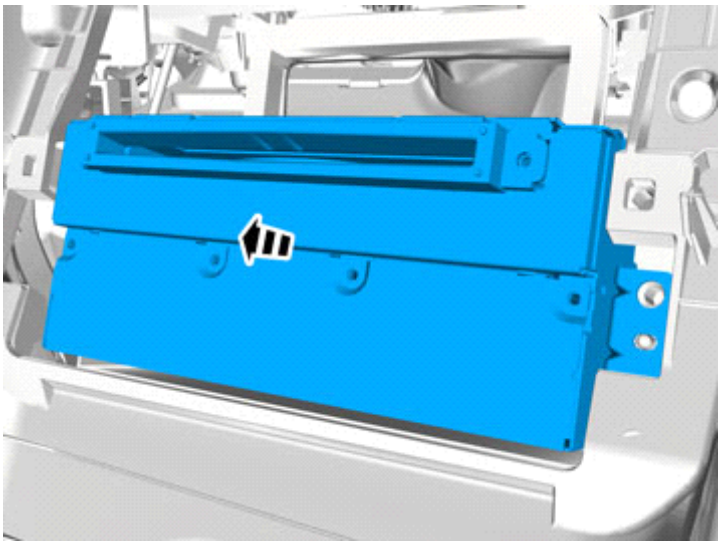


IMG-341808

The component(s) must not be reused.

Disconnect the connector(s).

60

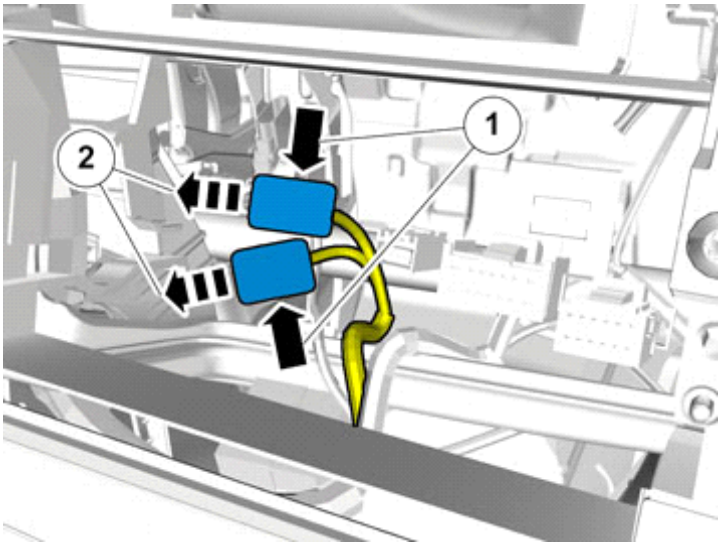


IMG-341811

Locate the prerouted connectors.

Remove the foam bags.

© Volvo Car Corporation

61

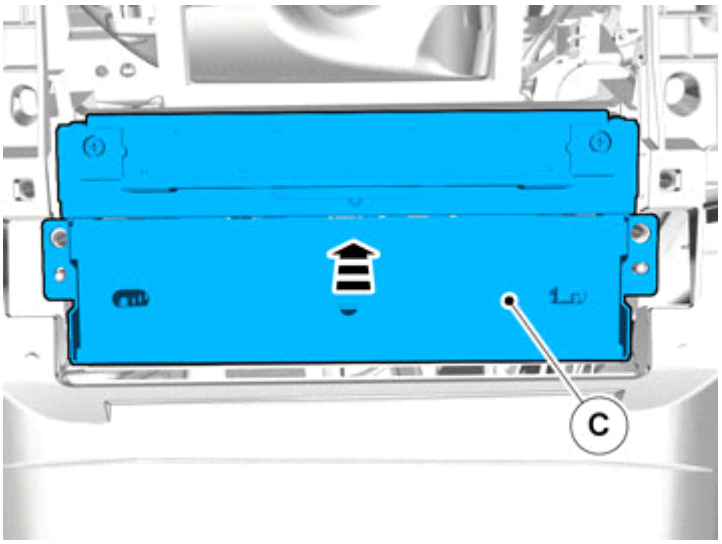


IMG-341806

Plug in the connectors.

The number of conectors can vary depending on the vehicle's equipment level.

62

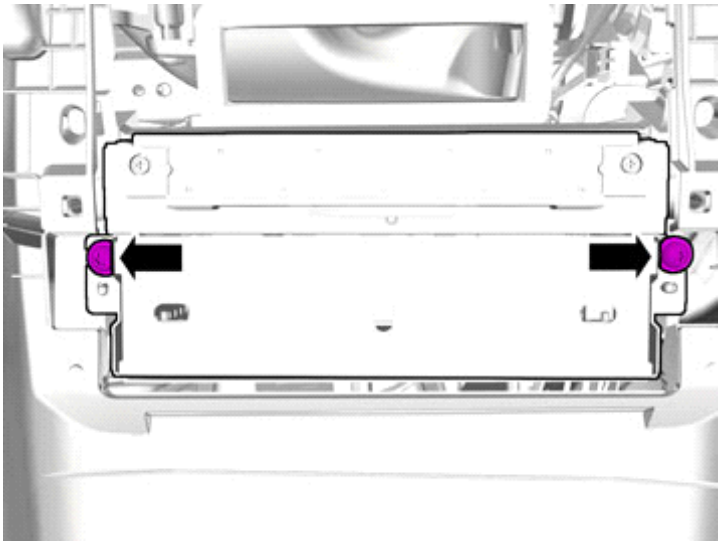


IMG-341805

Reinstall the screws.

Reinstall the detached components in reverse order.

© Volvo Car Corporation

63

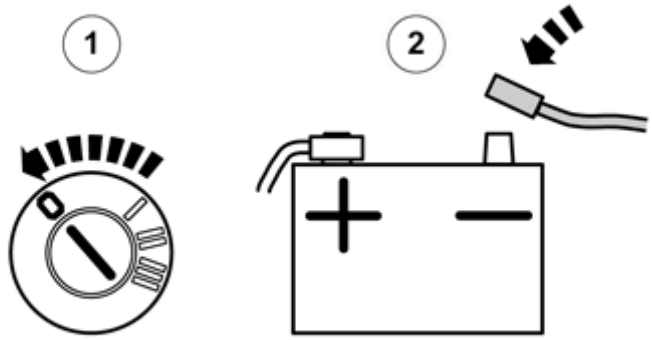


IMG-337646

Set the ignition key to position 0.

Reconnect the battery negative lead

64

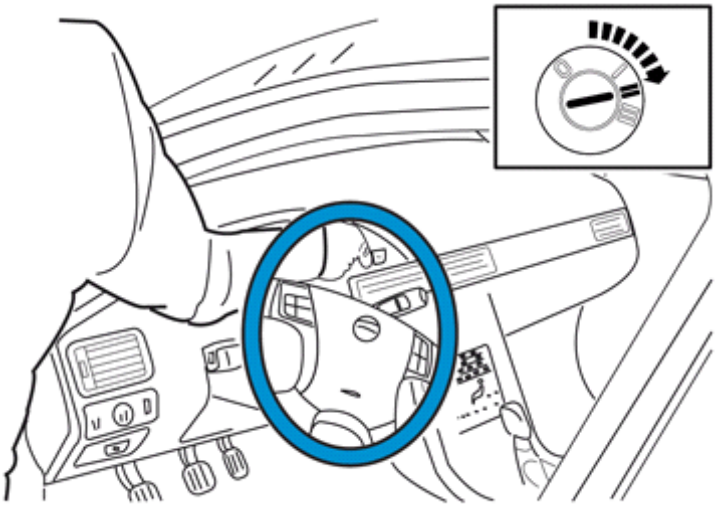


IMG-336904

Warning!

When the ignition is to be switched on for the first time after the battery has been disconnected, this must be done whilst by standing outside the vehicle, stretching your arm in and avoiding the working area for the airbags.

Set the ignition switch to position II.

65

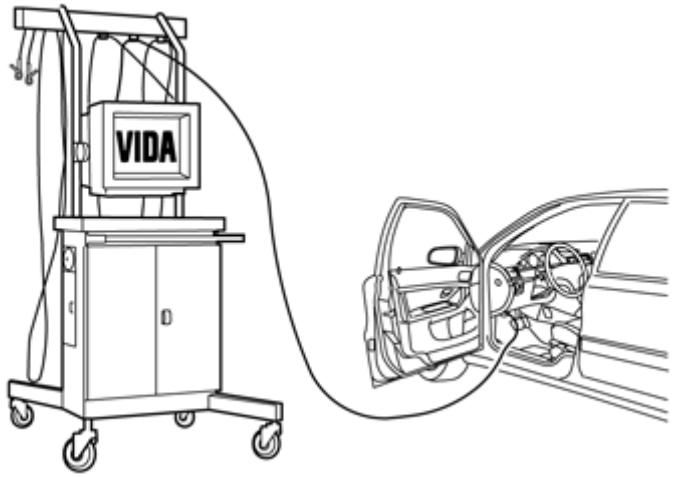

IMG-242268

Download the software (application) for the accessory's function following the service information in VIDA.

See VIDA or the accessories catalogue for software part number.

© Volvo Car Corporation

© Volvo Car Corporation