



# SUBARU

# FORESTER


CARGO FLOOR NET  
Part No. F5510SC000

Installation Instruction


## 1 Components

Parts	qty
Net(equipped with four hooks)	1
Instruction manual(this leaflet)	1

## 2 Completed chart

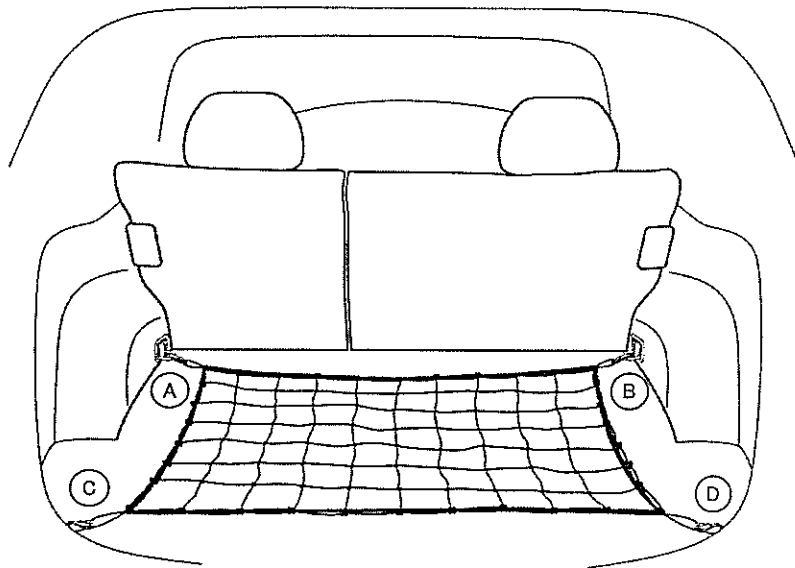

## 3 How to attach

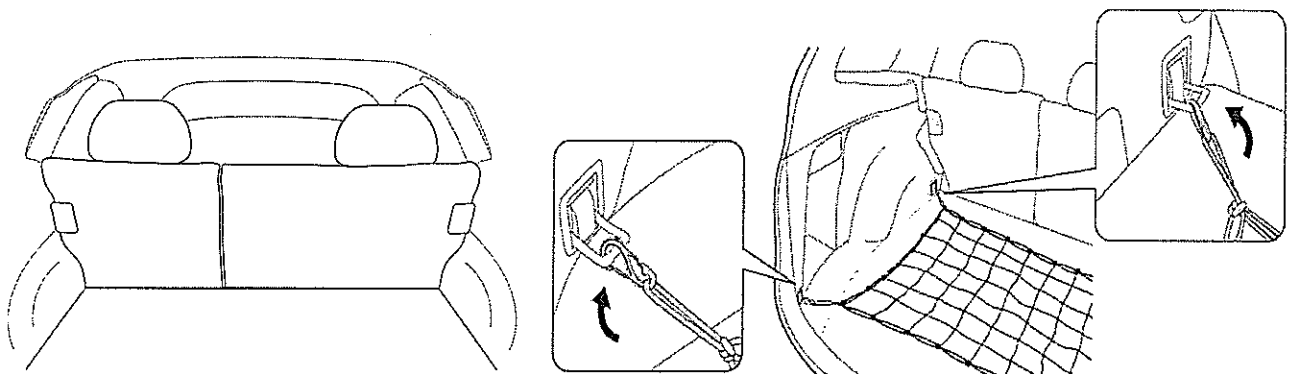

1) Open the rear gate.

2) Hook the net using the brackets(A-D) on the vehicle.

## 4 Caution

\*The maximum loading weight that this luggage net can hold is less than 5 kg.  
Overload will damage the net and its hooks.